



Bosch PS21 Battery Replacement

Replace the battery in your Bosch PS21.

Written By: Lillie Wolter



INTRODUCTION

Use this guide to replace the battery in the Bosch PS21.



TOOLS:

- [T8 Torx Screwdriver](#) (1)
 - [Small Needle Nose Pliers](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery



Remove the battery prior to working on the drill

- Pinch the two release tabs on the sides of the battery.
- Slide the battery out of the PS21.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:26:07 AM.